


ALUMINIUM SQUARE POLE CARRIER

CODE: PC150SB | PC175SB | PC200SB

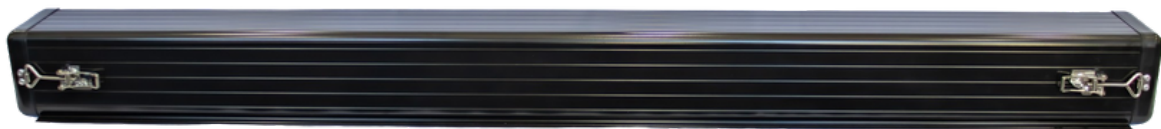

INSTALLATION

Drawbars vary across caravans and camper trailers, so you will need to drill 6 mm holes into the mounting flange. The exact hole positions will depend on the drawbar's shape, size, and your preferred placement.

An example of the mounting plate angle that may be required is shown below.

Position Pole Box onto the drawbar:

